

## *Gunner Remote*

### Purpose:


This document is a quick guide on the behavior of a modified Taranis which has gunner remote capability.

### *Back (servo 5) Bay instructions*

### Release payload:



Flip back arming switch towards you.

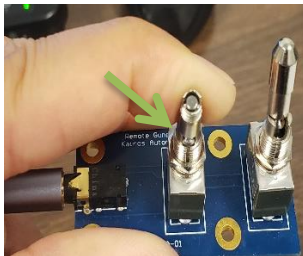

Hold the **SC ARM** switch towards you.



Hold the **SH FIRE** switch towards you while the **SC ARM** is held down.




Kairos Autonomi  
8700 S. Sandy Pkwy.  
Sandy, Utah 84070  
801-255-2950 (office)  
801-907-7870 (fax)  
www.kairosautonomi.com



Pin release.

**Extend pin:**

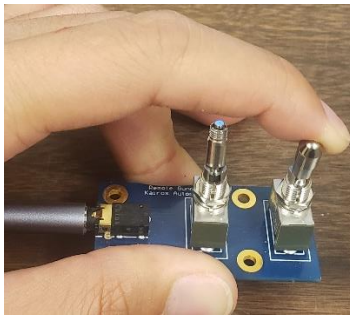

**ARM.**


While holding **SH FIRE** lever down release the **SC**




Pin extends outwards.

## *Front (servo 6) Bay instructions*


### Release payload:

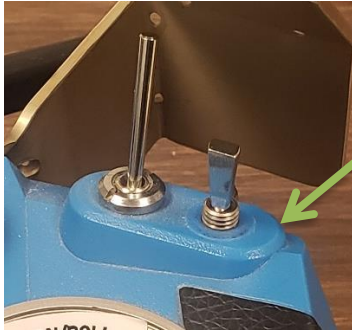

Flip the arming switch towards you.

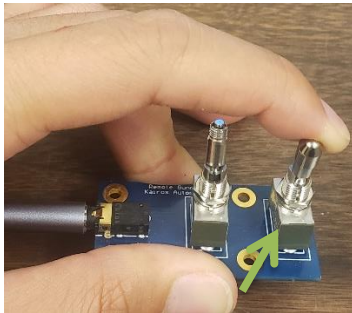

Hold the **SH FIRE** lever towards you.

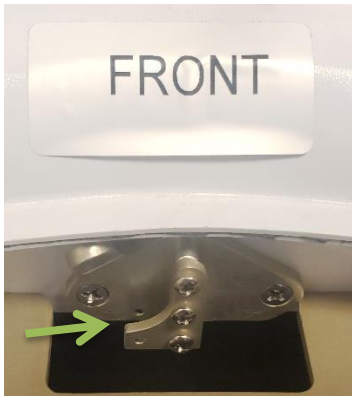

Pin release.



Kairos Autonomi  
8700 S. Sandy Pkwy.  
Sandy, Utah 84070  
801-255-2950 (office)  
801-907-7870 (fax)  
www.kairosautonomi.com

## **Extend Pin:**



While holding the **SH FIRE** lever towards you, Flip the arming switch away from you.



pin extends.